



# HOSE AND WIRE ROUTING

b1114xasx

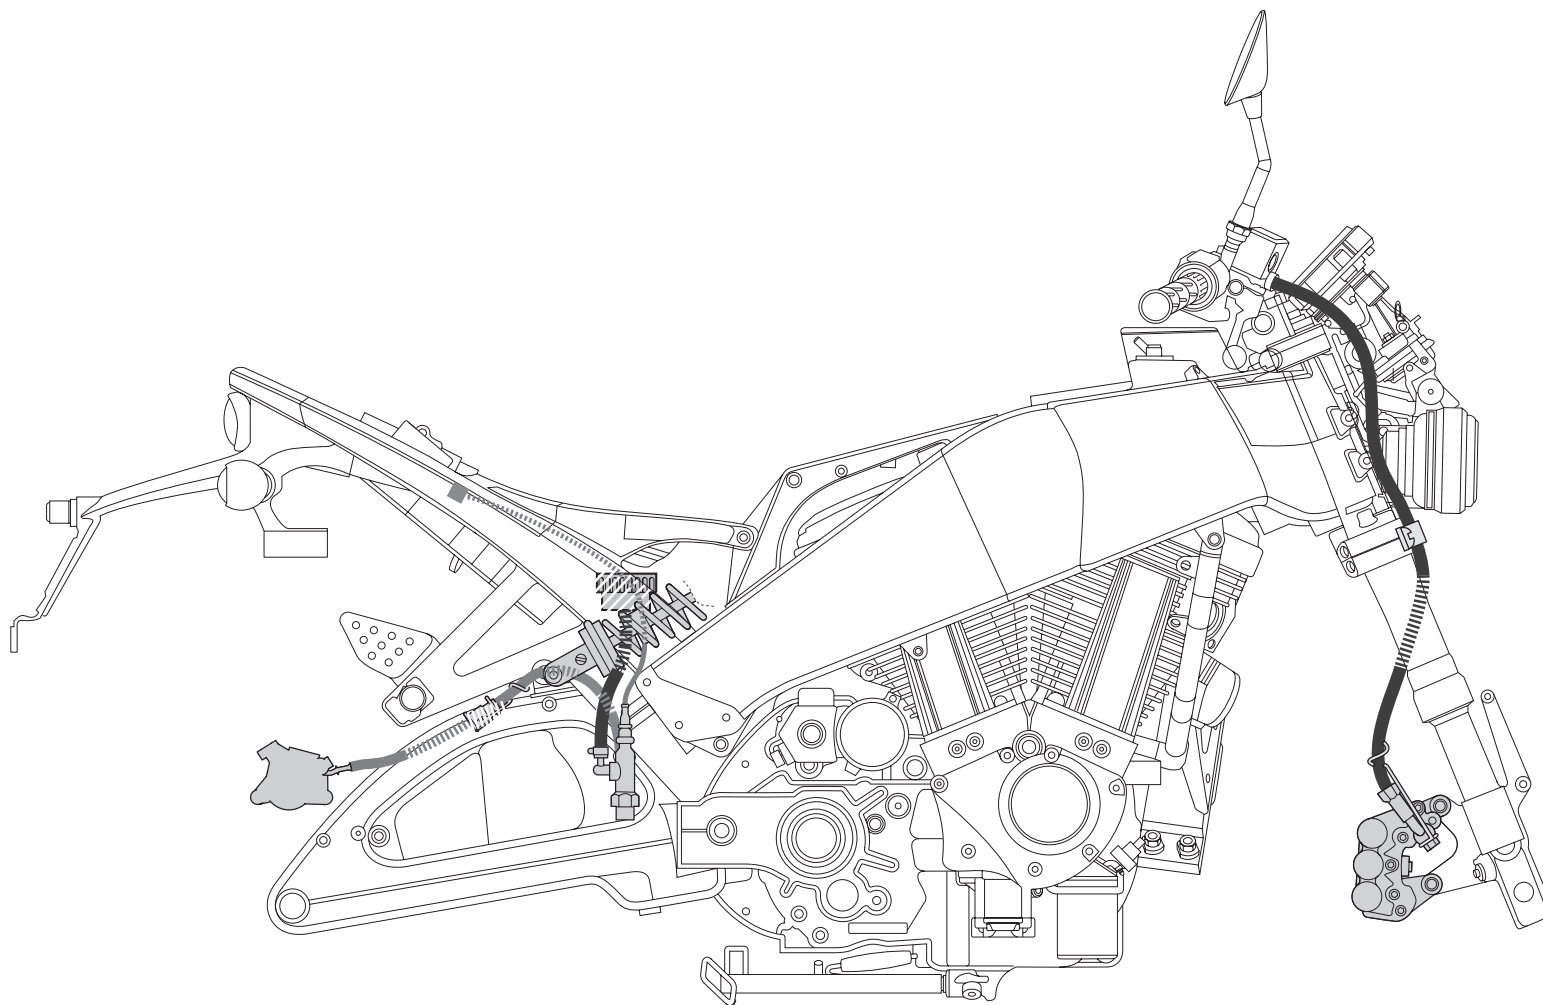


Front and Rear Brake Systems, Right Side View

b1115xbsx

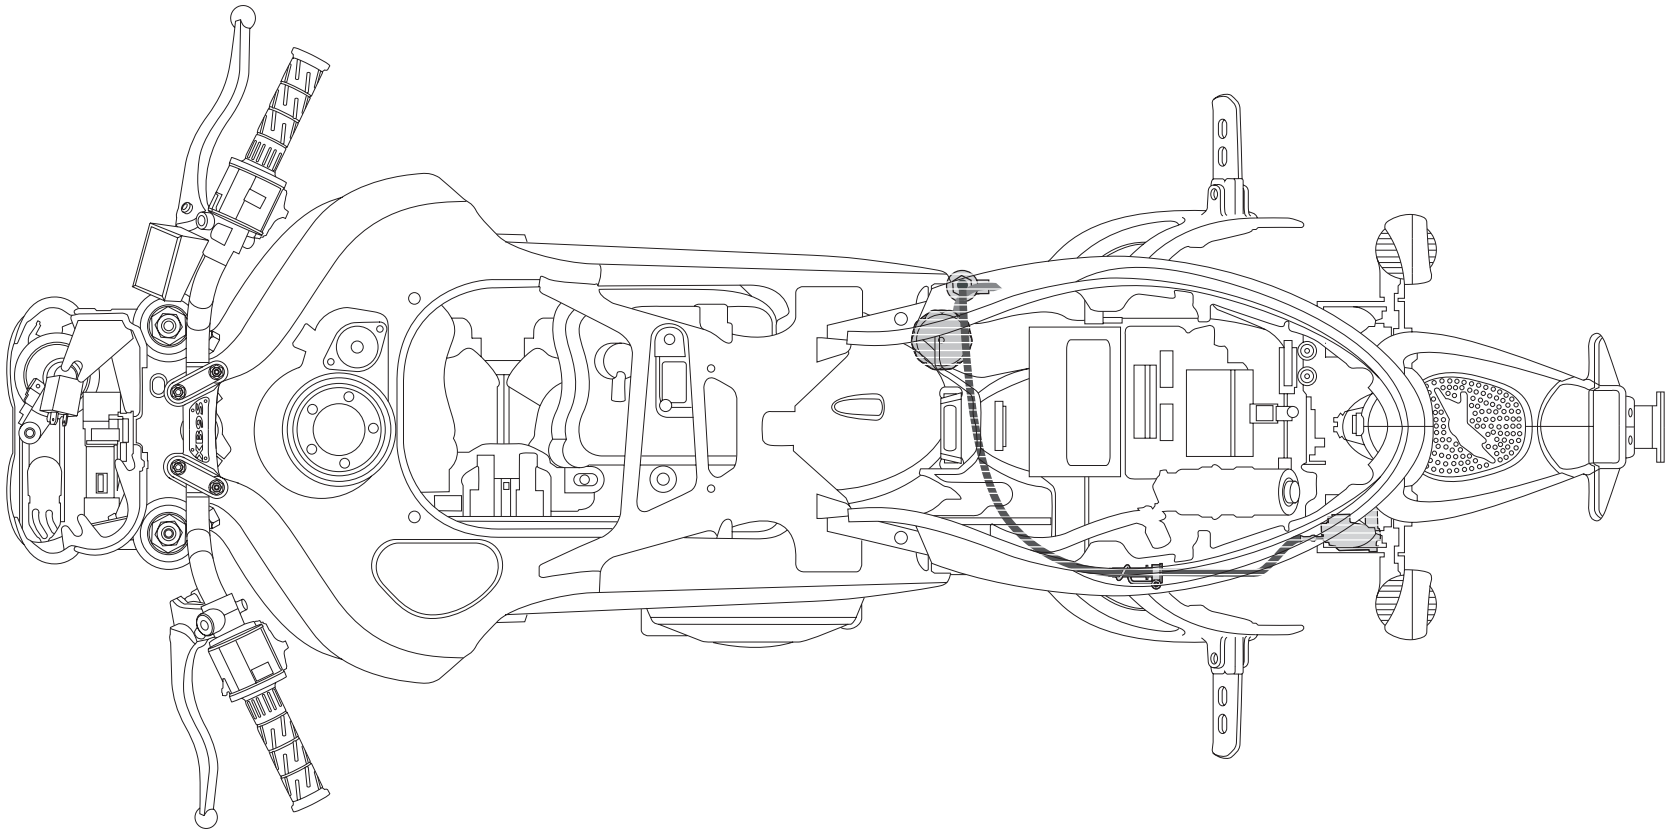


**Rear Brake Systems, Top View**

b1116xcsx

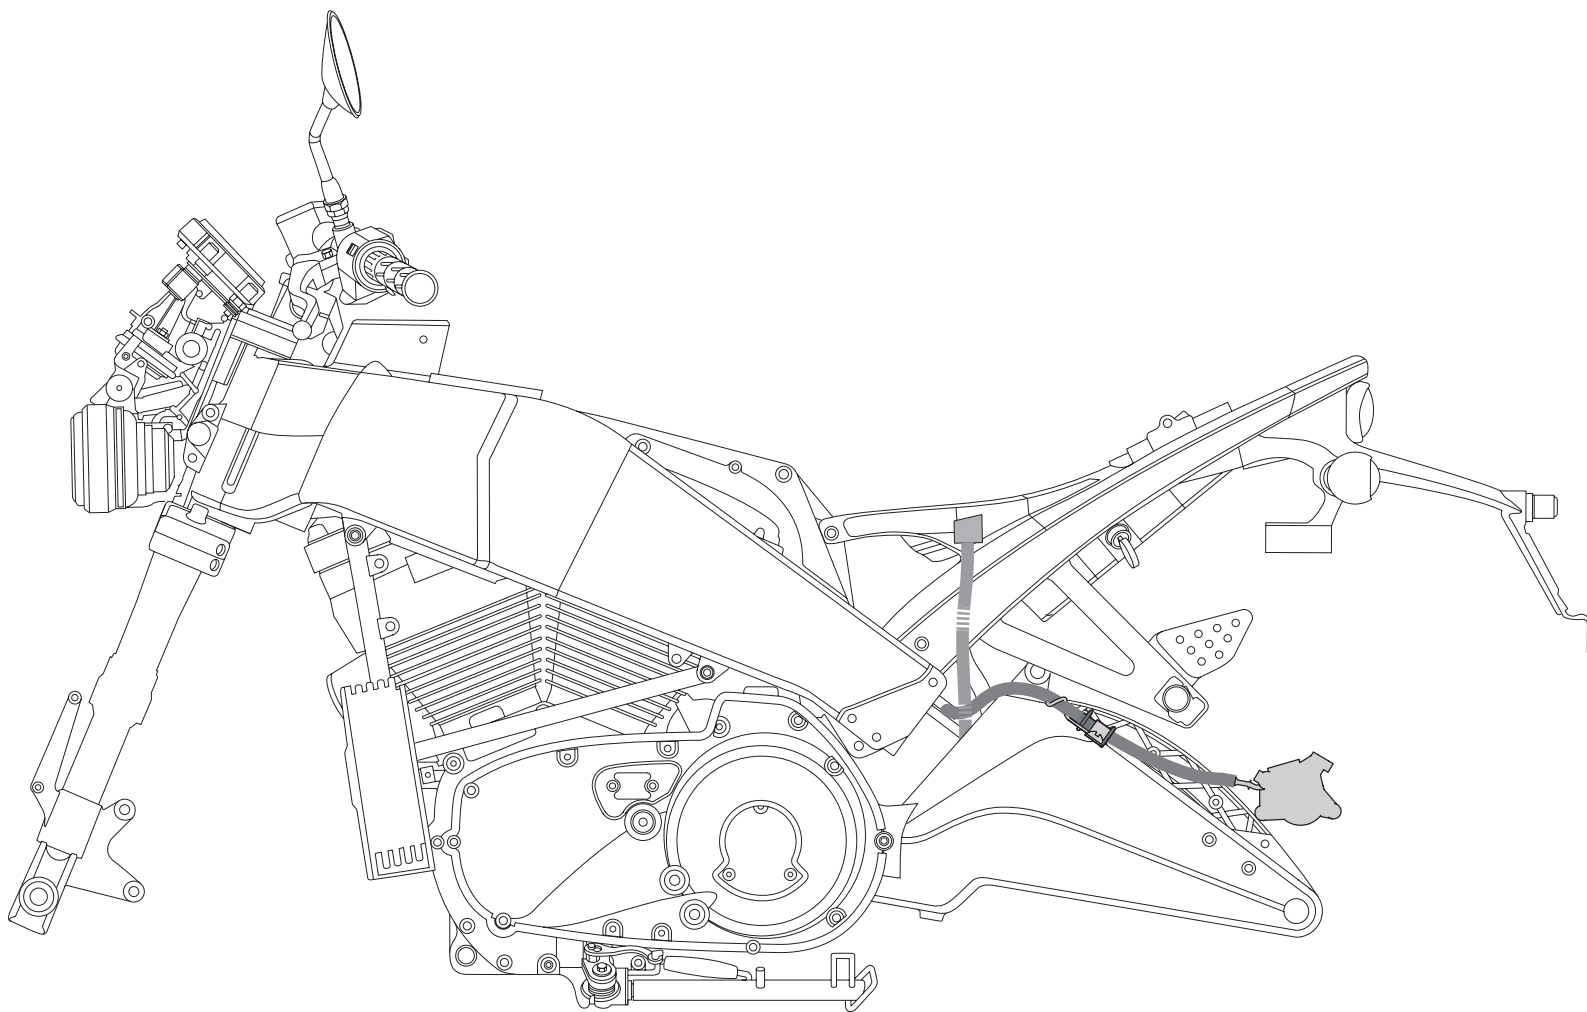


Rear Brake Systems, Left Side View

b1117xasx

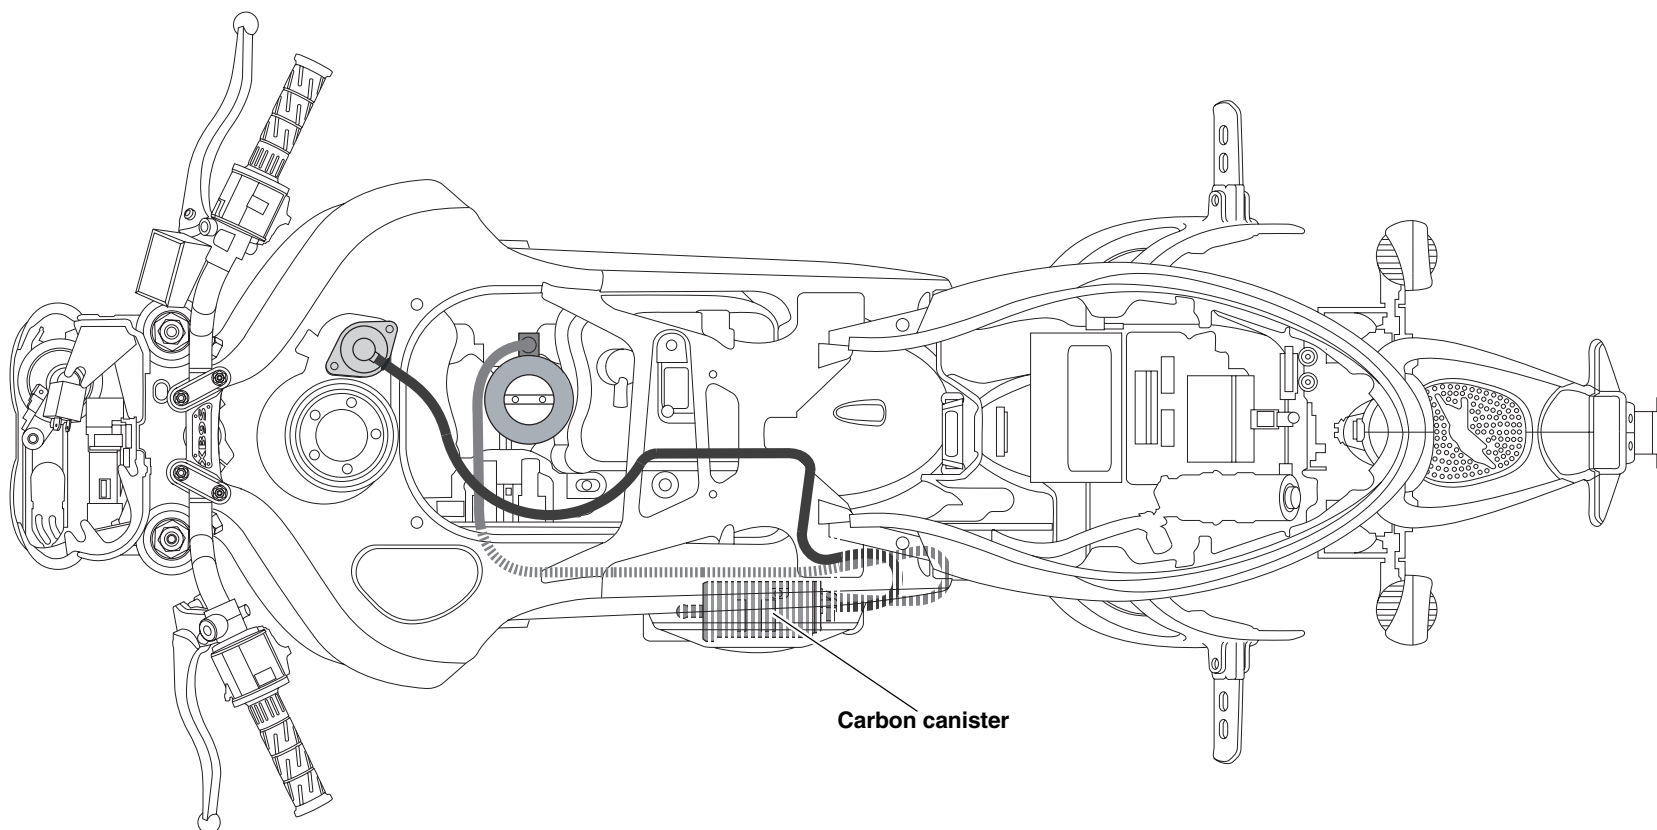

Evaporative Emissions Control, California Models, Top View

b1118xbxsx

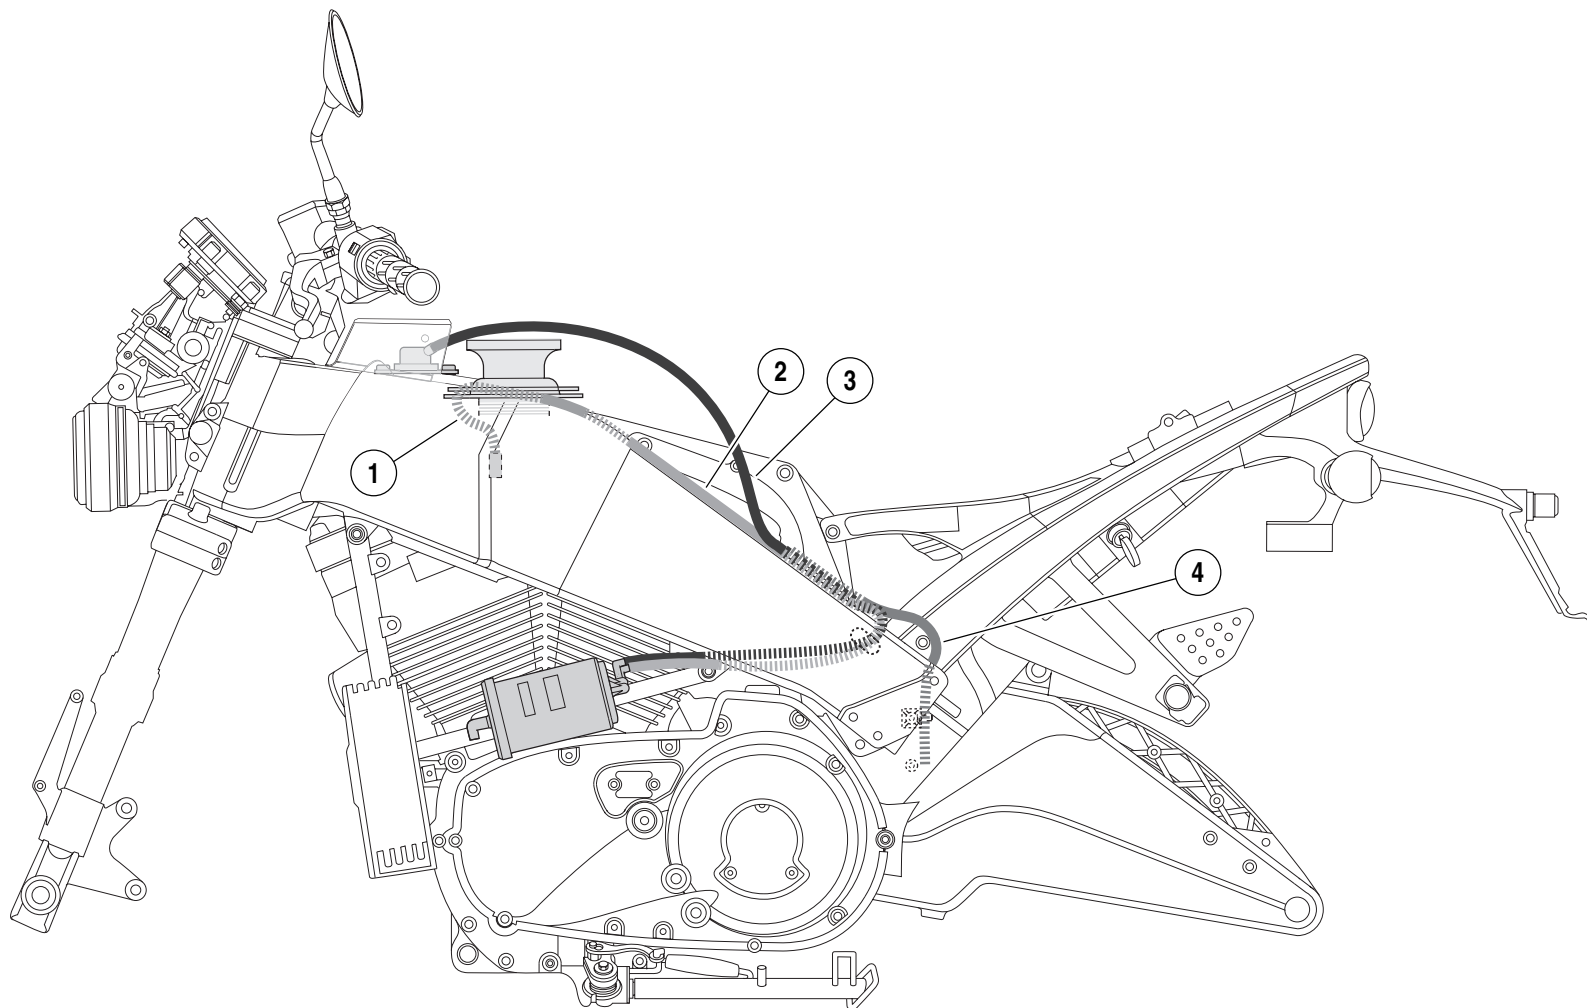


1. To induction module
2. From induction module (California)

3. From fuel tank (California)
4. From fuel tank to atmosphere (49 state)

Evaporative Emissions Control, California and 49 State Models, Left Side View

b1119xasx

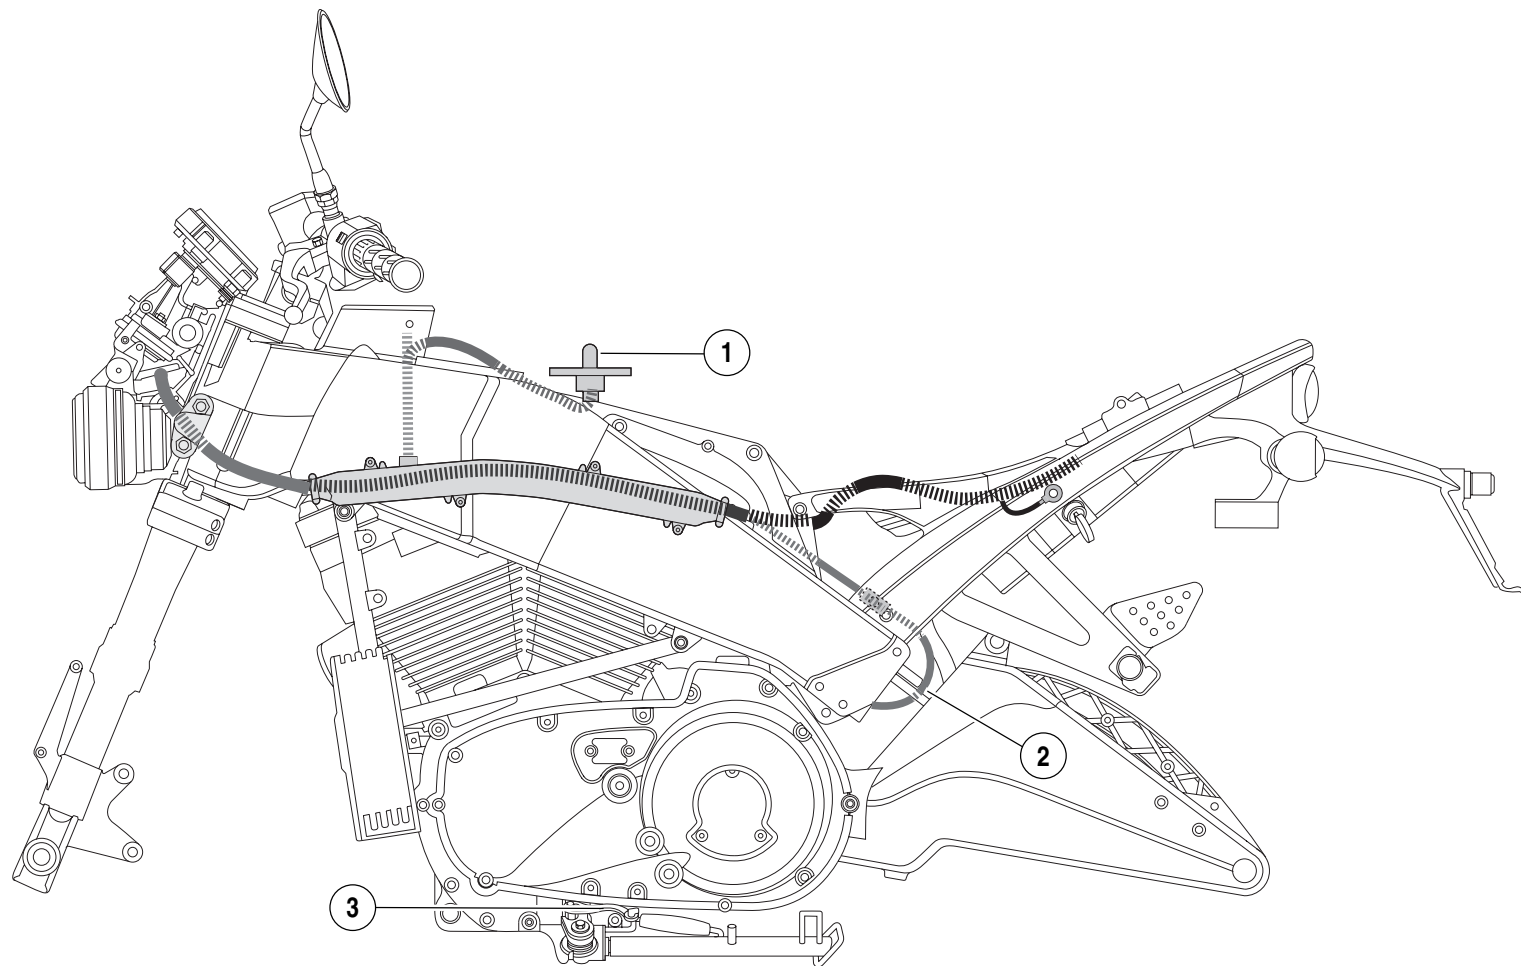


1. Intake air temperature sensor (IAT)

2. Fuel pump

Wiring Harness, Left Side View

b1120xbsx

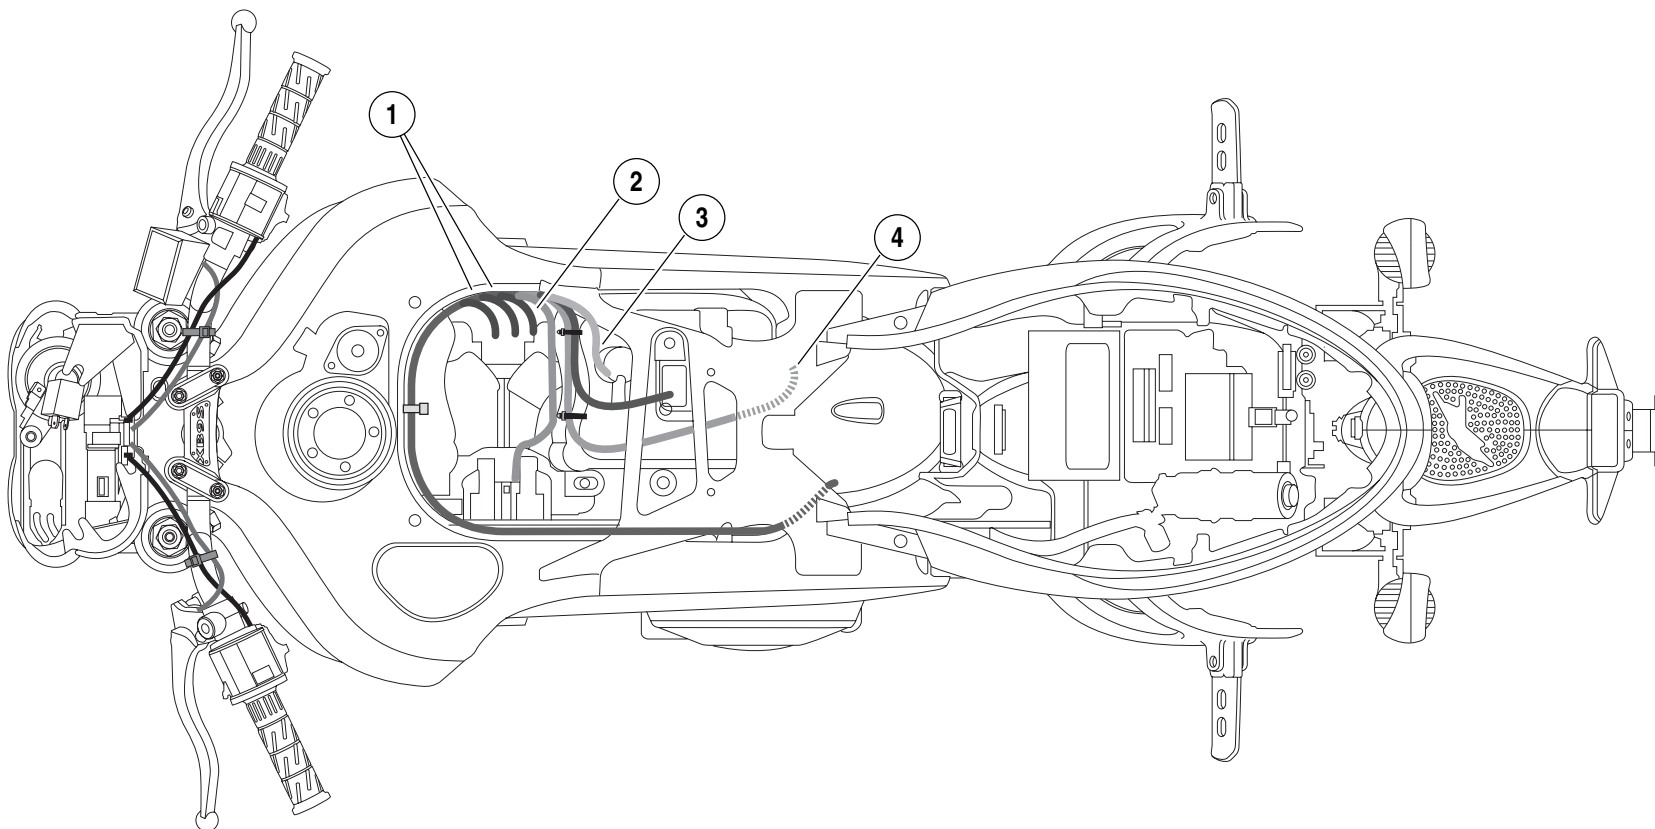


- 1. Fuel injector (2)
- 2. Throttle position sensor (TPS)

- 3. Intake air temperature (IAT) sensor
- 4. Oxygen (O2) sensor

Wiring Harness, Top View


b1121xcsx

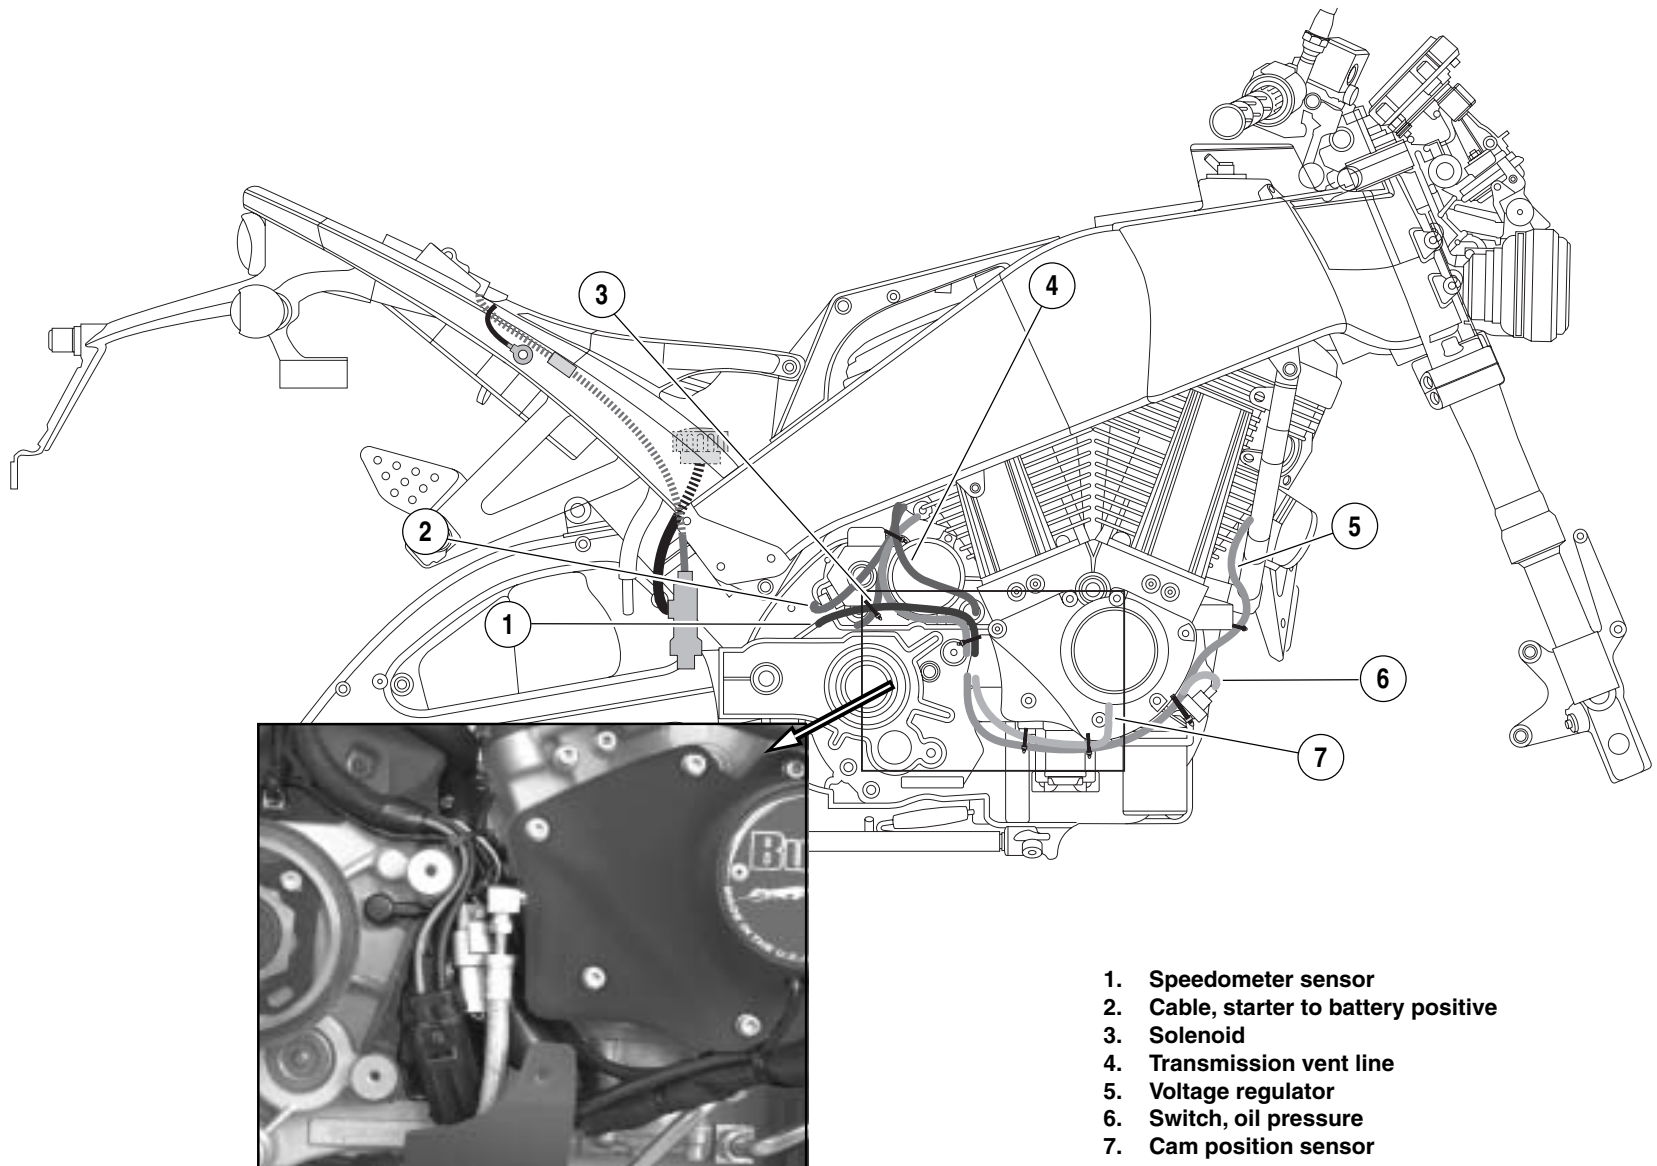

Wiring Harness, Right Side View



b1122xasx

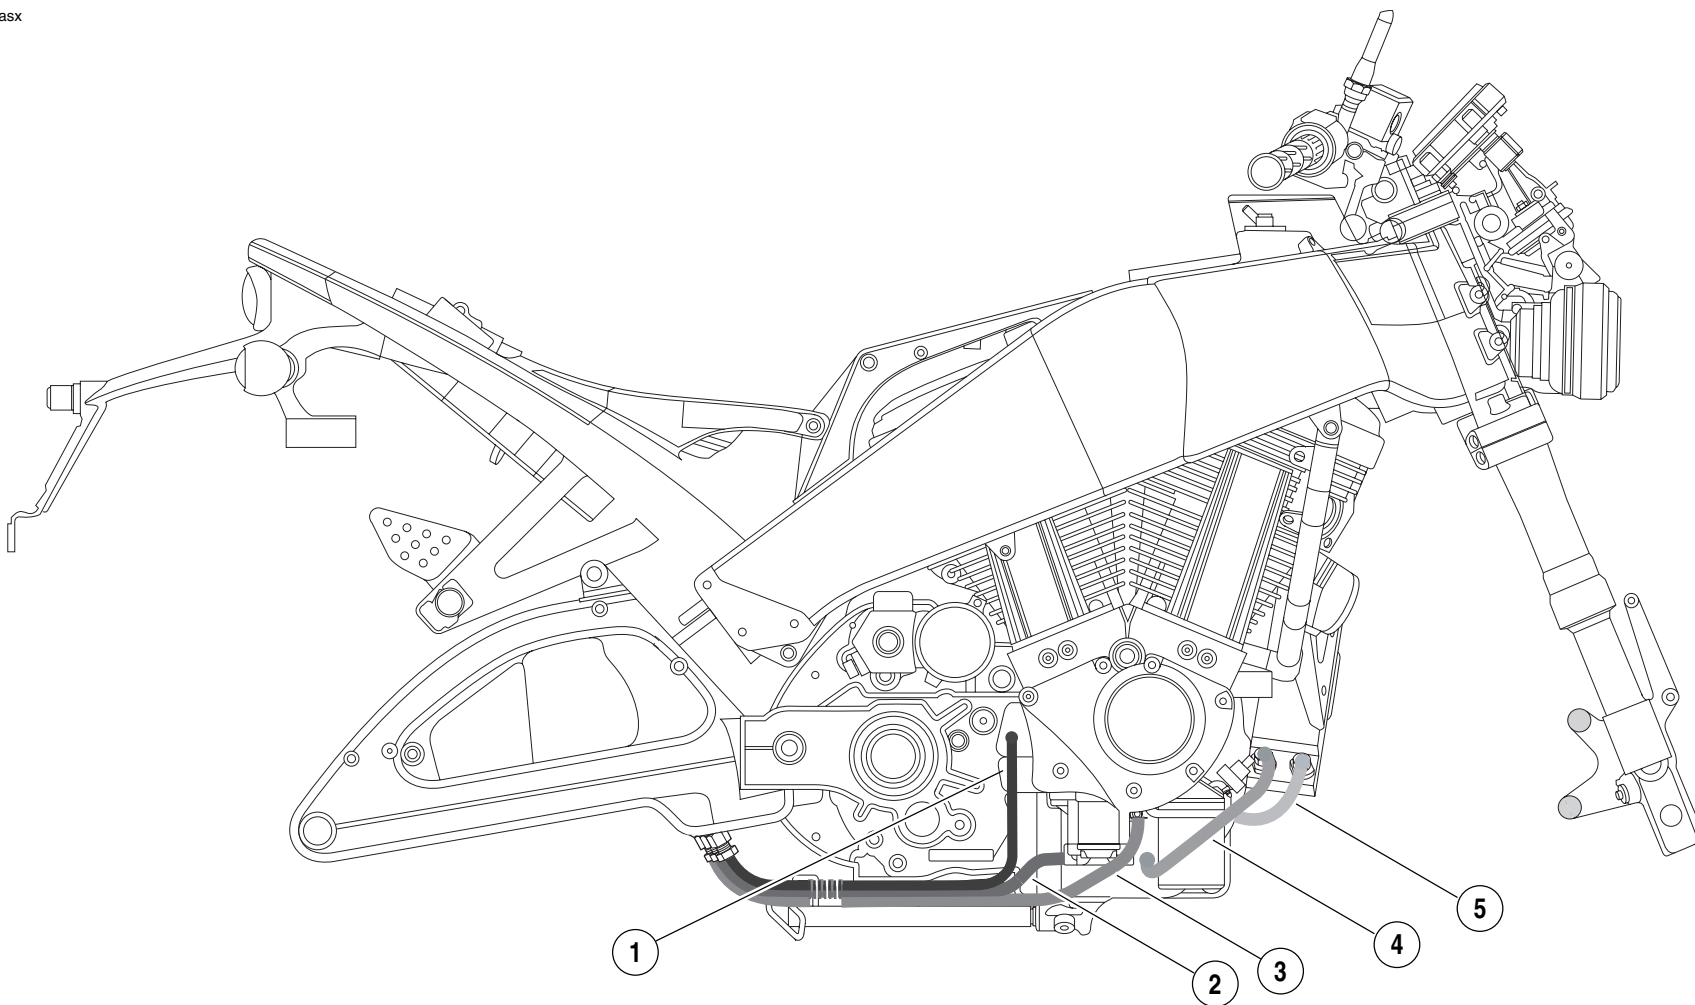


- 1. Vent line
- 2. Feed oil line
- 3. Return oil line

- 4. Feed oil line from the oil pump to the oil cooler
- 5. Return oil line from the oil cooler to the oil filter housing

Oil Lines, Right Side View

b1123xbsx

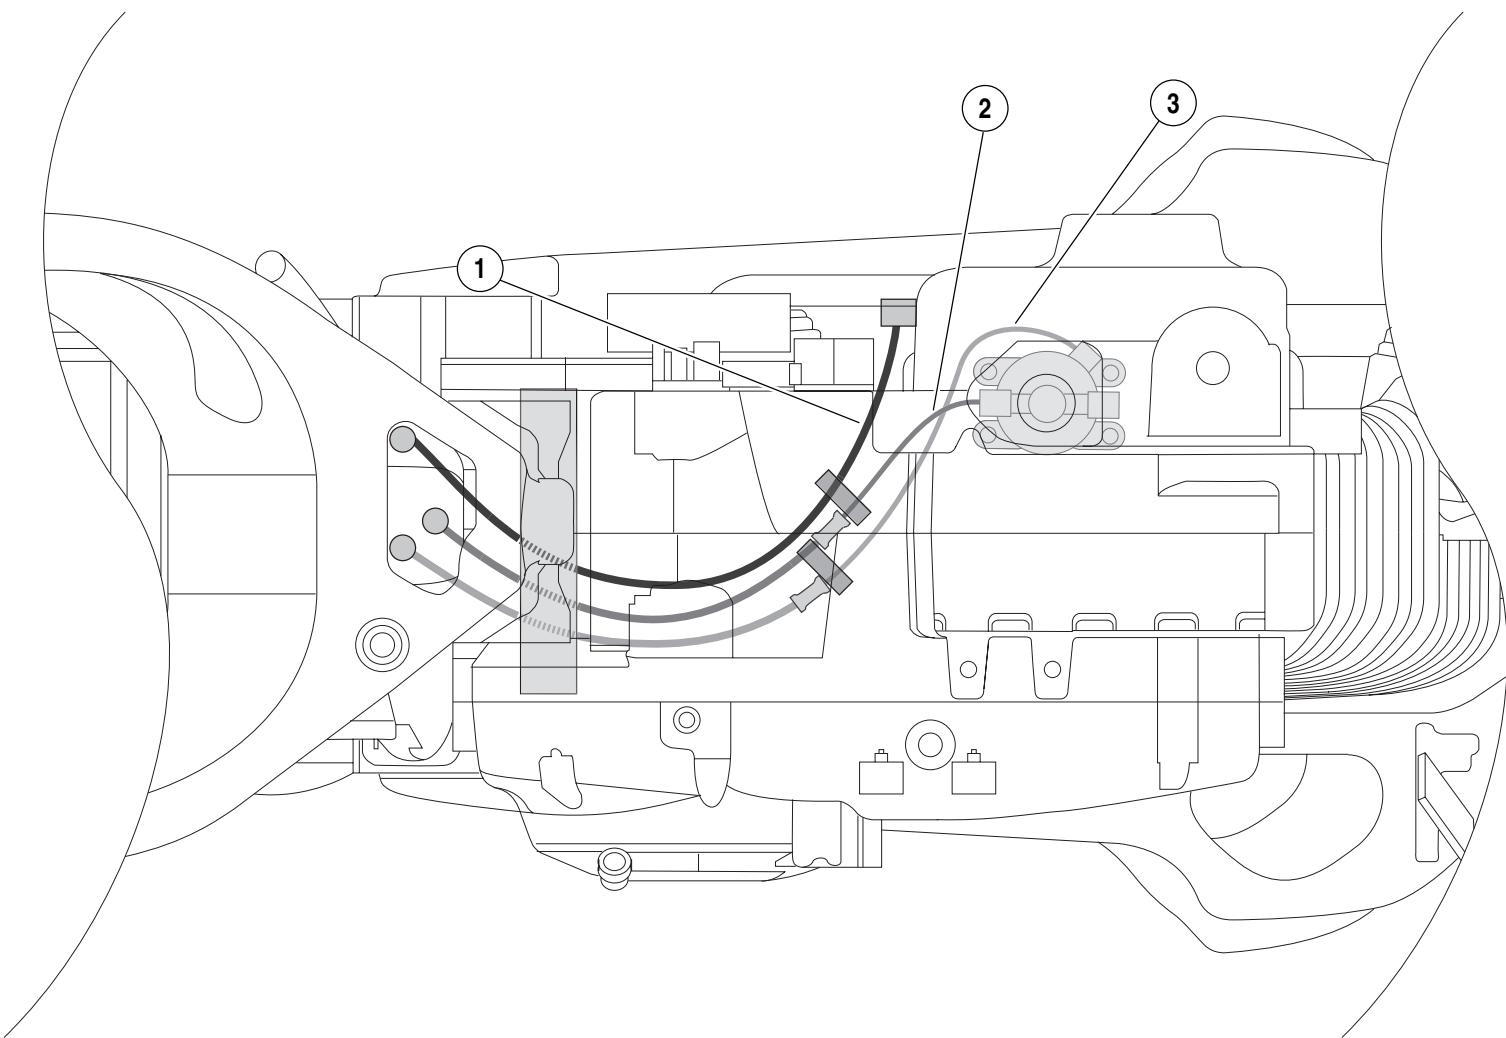


1. Vent line

2. Feed oil line

3. Return oil line


Oil Lines, Bottom View

b1124xasx

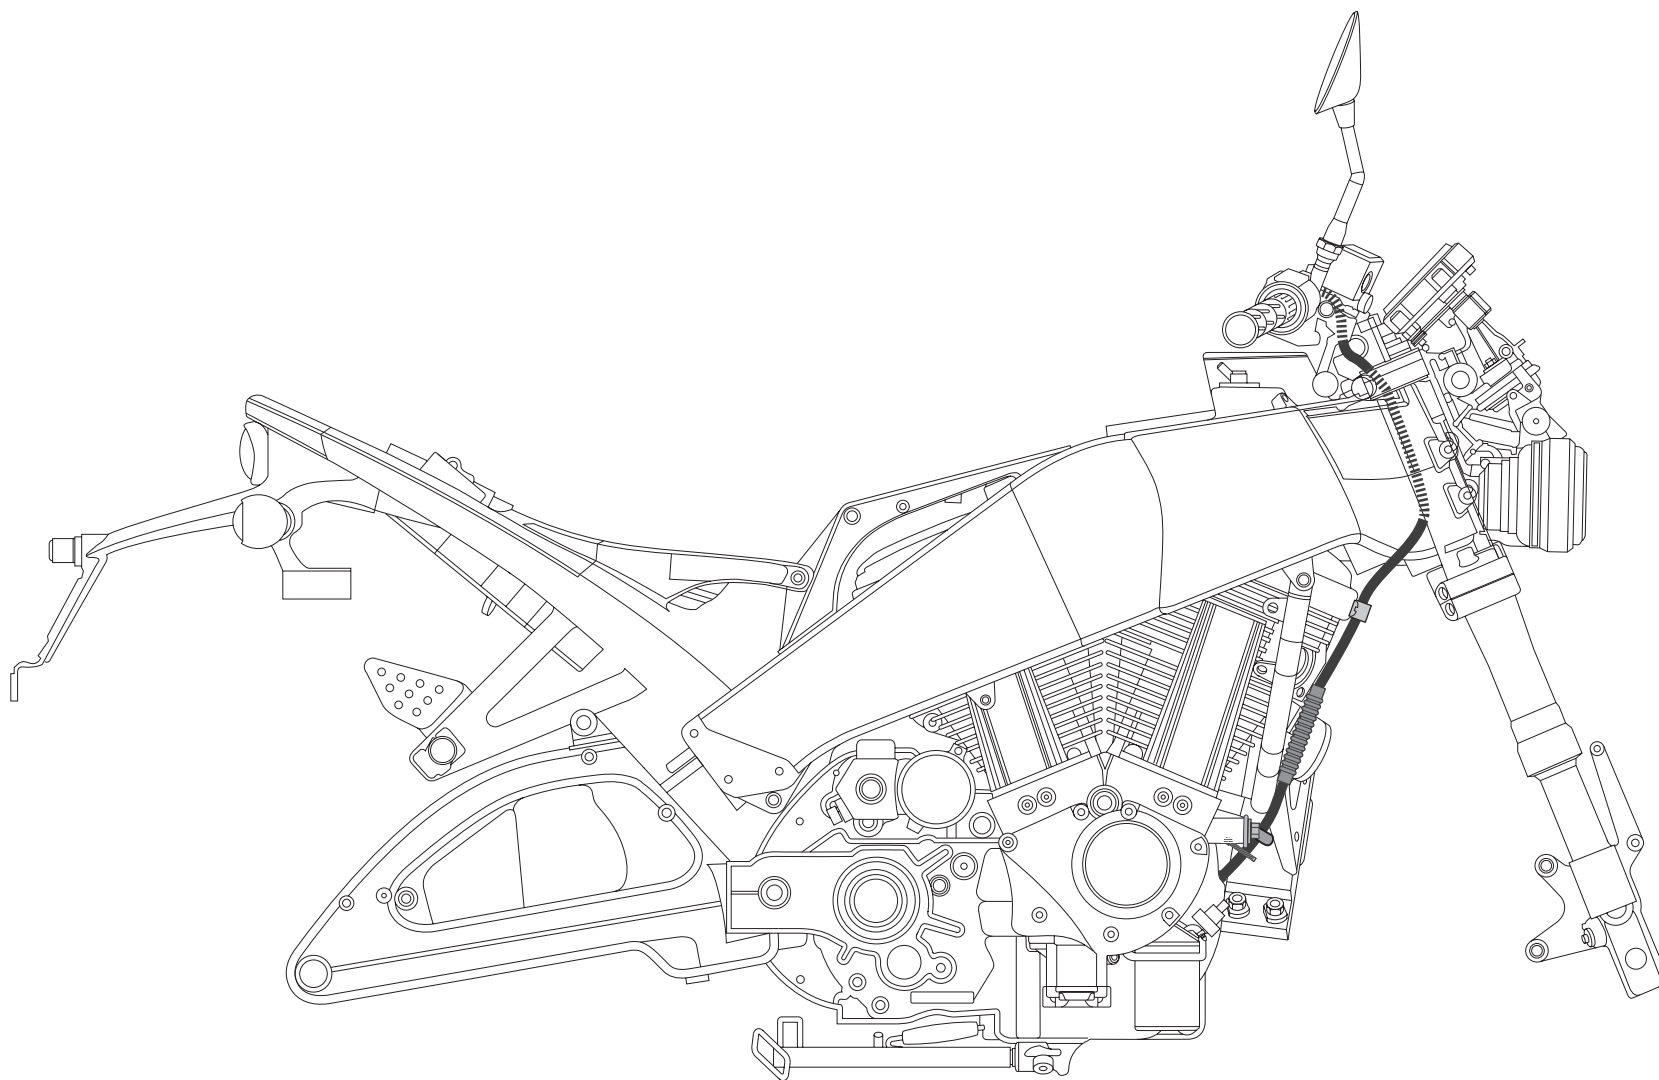


**Clutch Cable, Right Side View**

b1125xbx

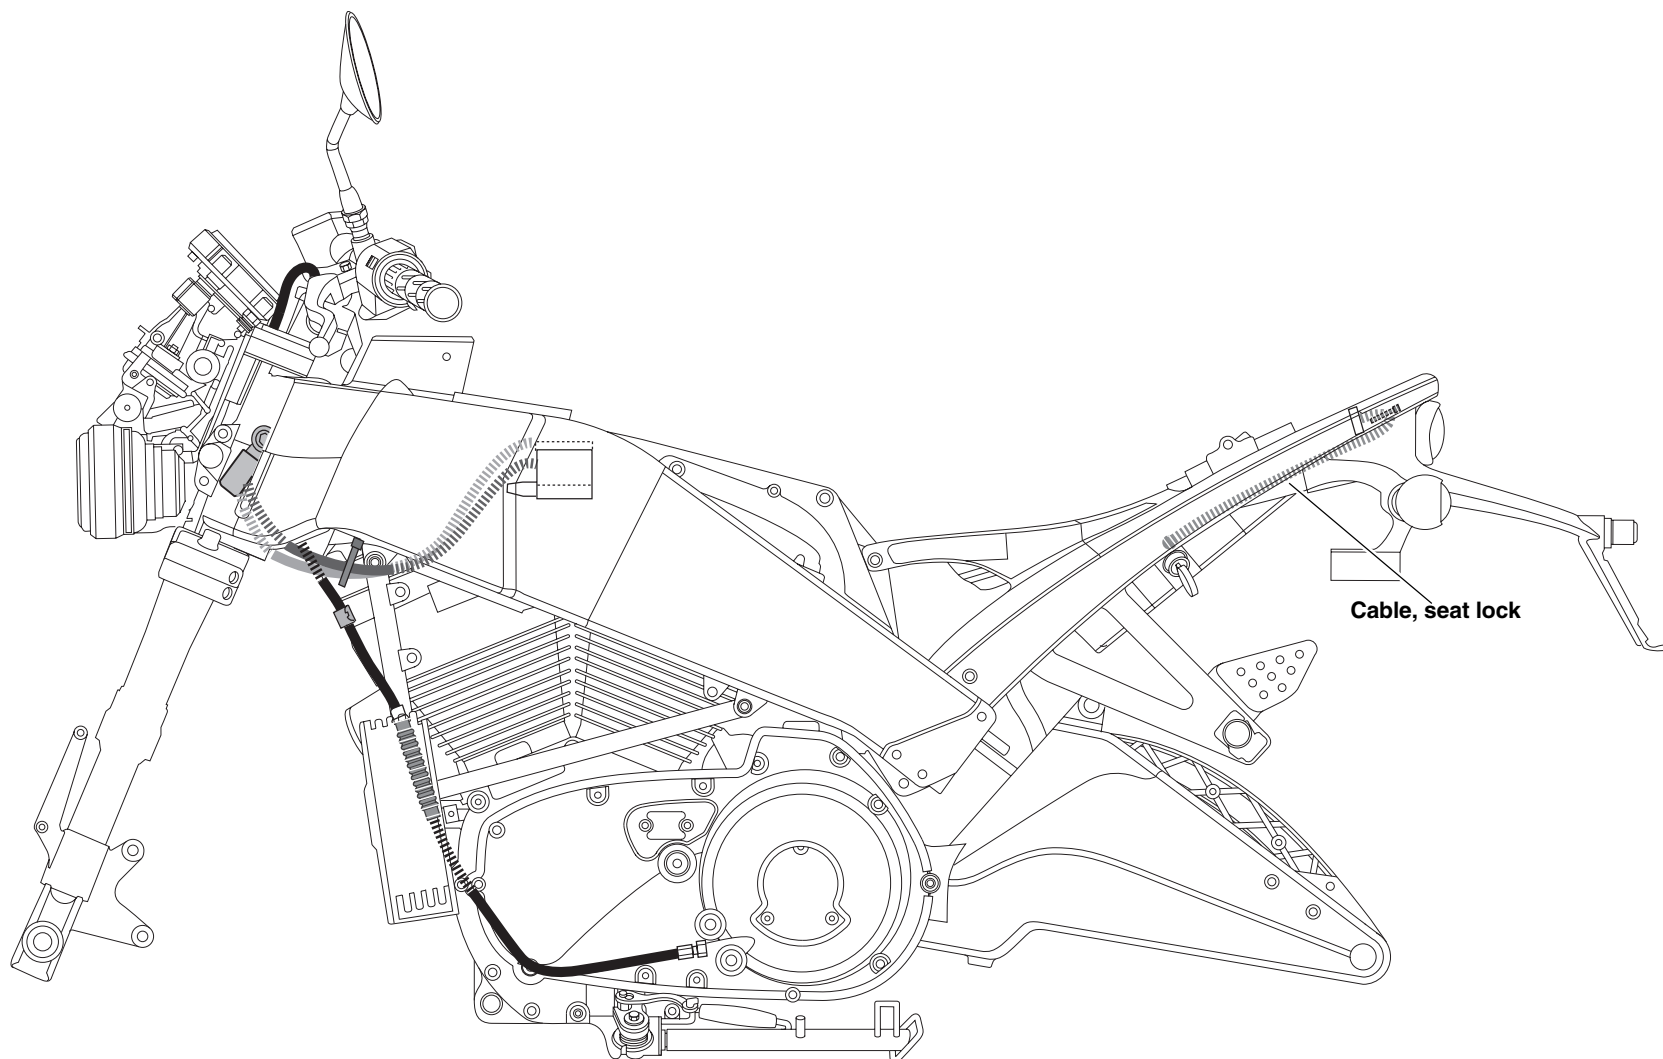

**Clutch, Throttle and Seat Release Cables, Left Side View**

b1126xcsx

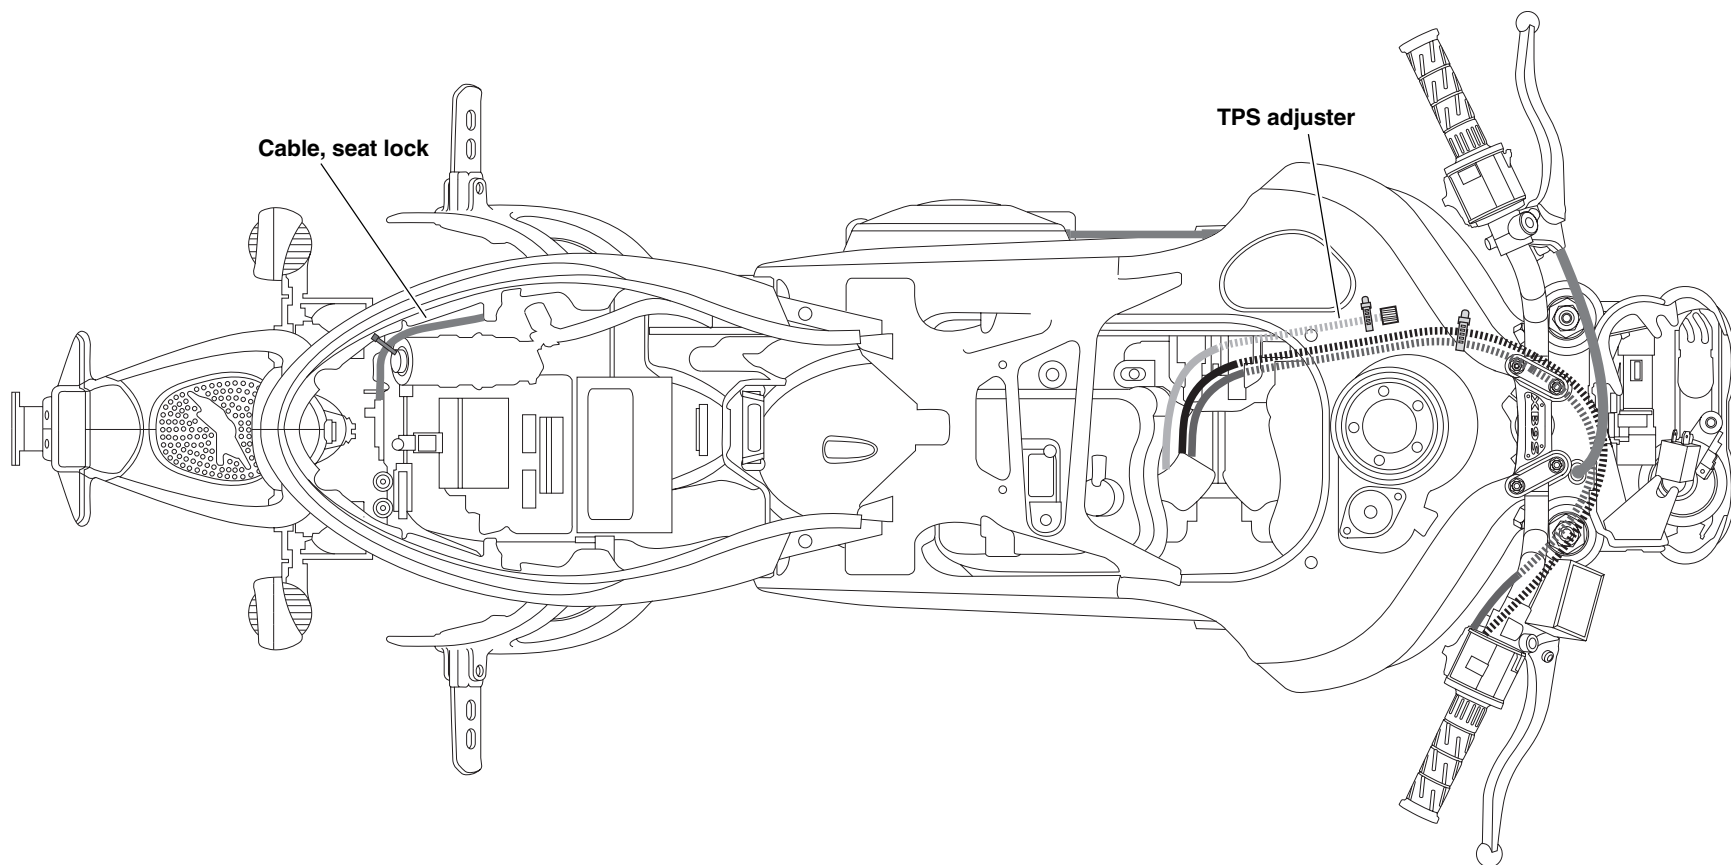

Clutch, Throttle and Seat Release Cables, Top View

# NOTES

---